




ASUS U46E-RAL7 RAM Replacement

RAM replacement guide for the ASUS U46E-RAL7 Laptop.

Written By: Connor

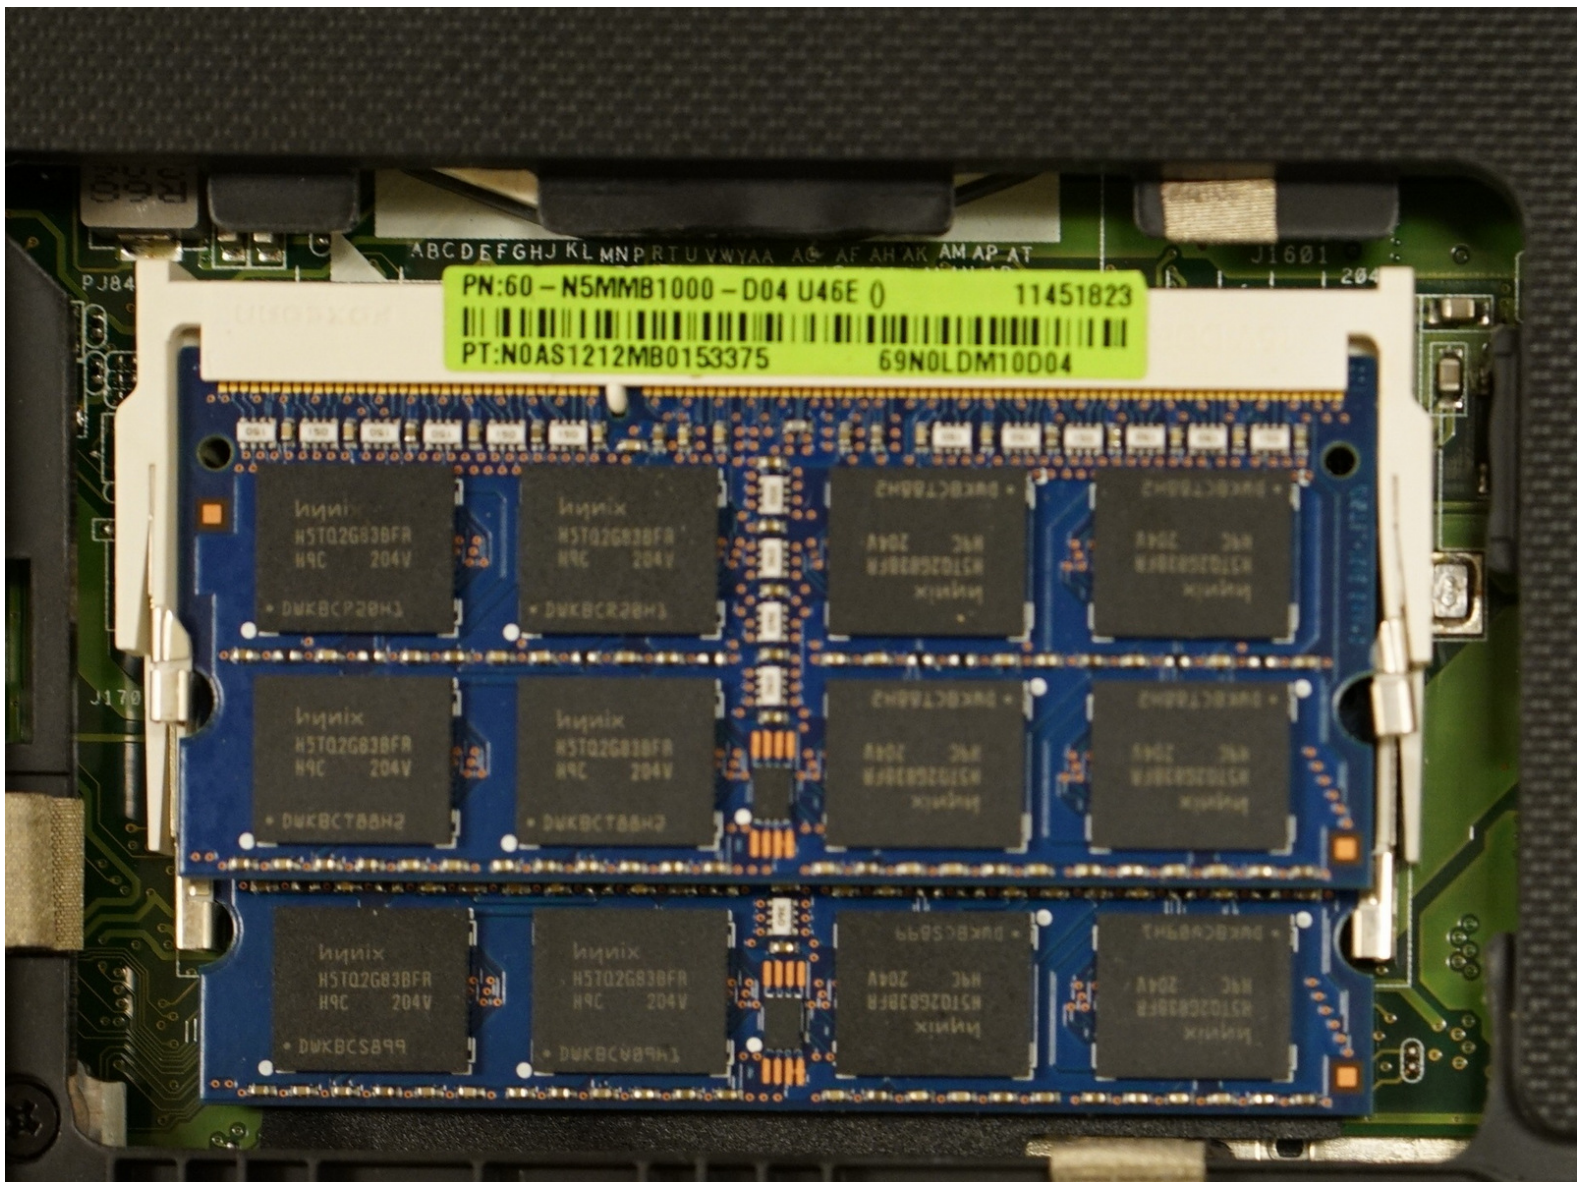

INTRODUCTION


In this guide, the user will be able to follow step-by-step instructions for replacing the RAM in his or her ASUS U46E-RAL7 Laptop.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — RAM

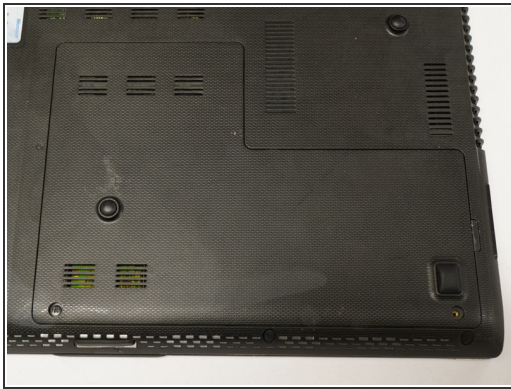


- Using a size 0 Phillips screwdriver, remove two (2) 5mm screws from the L shaped back panel.

Step 2

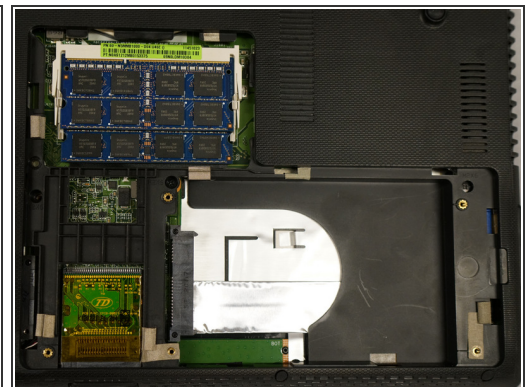

- Using a plastic opening tool, pop off the L shaped panel.

Step 3

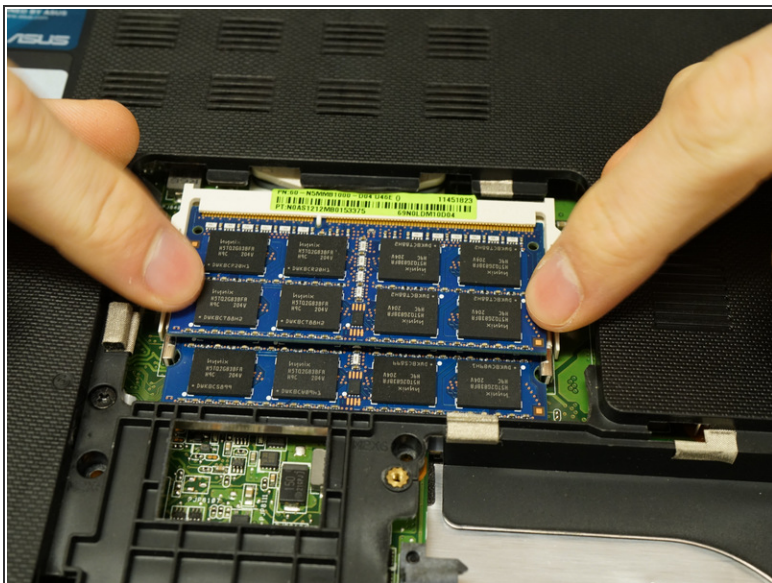

- Place both index fingers on the metal bars on the edge of the ram.
- Press down gently until the RAM pops up.

Step 4



- Pull the RAM stick out of the socket.

Step 5



- Repeat steps 1-4 for the second stick of RAM.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 03:23:59 PM.